

How To Replace Pallet Truck Steer Wheels



1. Remove the Dust Cap



2. Remove the Circlip using Circlip Pliers



3. Remove the Wheel off the Axle



4. Put the New Wheel on the Axle and put the White Spacer back on



5. Fit Circlip using Circlip Pliers



6. Put the Dust Cap Back on



*Order Your
Circlip Plier
Set Here*



WHALL
PALLETTRUCKPARTS.co.uk

Tel: +44 (0)28 9084 1444 info@PalletTruckParts.co.uk